

# Installation Guide

## REDtip Roof Hook M102


Compatible with slates

See REDtip selector chart




**1**

Remove slates and identify a suitable rafter to attach the REDtip roof hook to. Tack a lead flashing (or other suitable material) to the batten below the hook. Ensure that the screws are fully tightened to secure the hook.

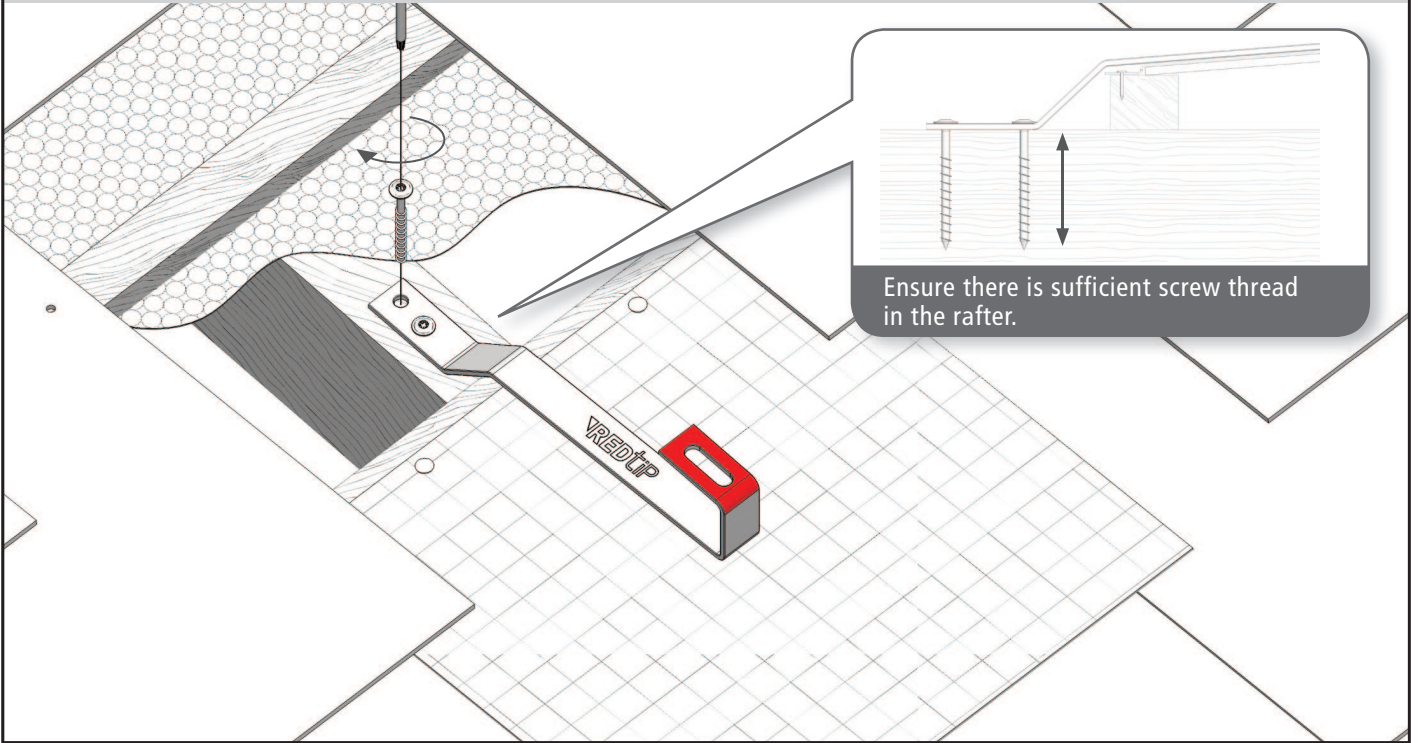


**2**

Cut the slates to fit either side of hook.

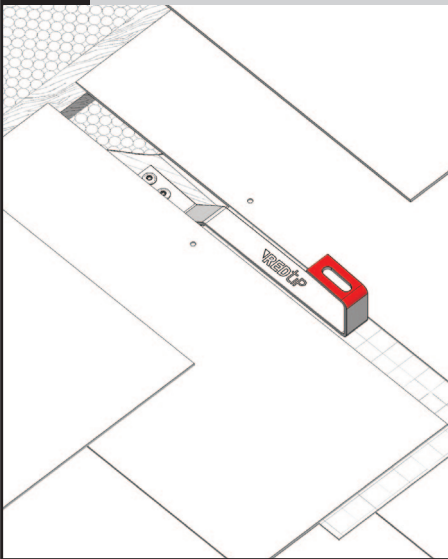

**3**

Nail second flashing to the batten above the hook and under the adjacent slates, to make weathertight.

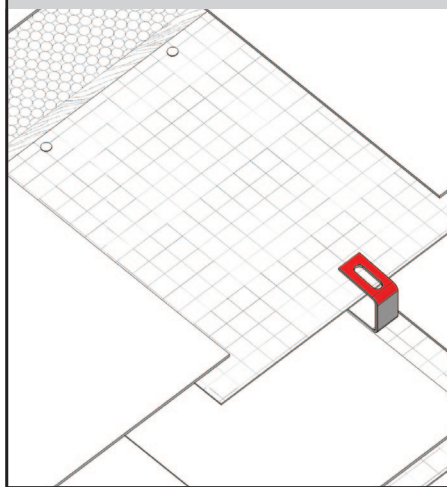

**4**

Replace the slates above.

